

Latest update: 14/4 - 2020



Clutch housing

Clutch housing tailored to the customer's engine. Bracket for starter that can be covered when not in use. If our starter is used the flywheel ring gear need to be manufactured according to our specifications. The starter position which is low and further back, is advantageous from a weight standpoint and also frees space beside the engine block where it may otherwise be located. This also makes it easy to change, and the area it is not so hot. The starter motor can be seen in the "details" – site.

Tel: +46 (0)533-170 70

Web: www.unicus.se

Mob. +46 (0)705 - 366533 E-mail: info@unicus.se